

Curtis® WILBUR CURTIS COMPANY, INC.

Generation 3 - Airpot Brewer Instructions


 
 
Important Safeguards/Conventions

This appliance is designed for commercial use. Any servicing other than cleaning and maintenance should be performed by an authorized Wilbur Curtis service center.

- Do NOT immerse the unit in water or any other liquid
- To reduce the risk of fire or electric shock, do NOT open top or rear panel. No user serviceable parts inside. Repair should be performed only by authorized service personnel.
- Keep hands and other items away from hot parts of unit during operation.
- Never clean with scouring powders, bleach or harsh implements.

Models Included

- D1000GT
- D500GT

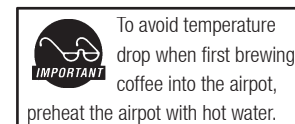

Conventions:



WARNINGS – To help avoid personal injury



Important Notes/Cautions



Sanitation Requirements

Curtis GT Units are Factory Pre-Set and Ready to Go... Right out of the Carton. Following are the Factory Settings for your D1000GT Airpot Coffee Brewing System:

- Brew Temperature = 200°F
- Brew Volume = Set to dispensing vessel requirements (2.2 liters)

Generally there will never be a reason to change factory programming. However, should you need to make slight adjustments to meet your brewing needs, programming instructions are provided later in this manual.

System Requirements:

- Water Source 20 – 90 PSI (Minimum Flow Rate of 1 GPM)
- Electrical: See attached schematic for standard model or visit www.wilburcurtis.com for your model.

Equipment to be installed to comply with applicable federal, state, or local plumbing/electrical codes having jurisdiction.

SETUP STEPS

The unit should be level (left to right and front to back), located on a solid counter top. Connect a water line from the water filter to the brewer. NOTE: Some type of water filtration device must be used to maintain a trouble-free operation. (In areas with extremely hard water, we suggest that a sedimentary and taste & odor filter be installed.) This will prolong the life of your brewing system and enhance coffee quality.


- The National Sanitation Foundation requires the following water connection:
1. A quick disconnect or additional coiled tubing (at least 2x the depth of the unit) so that the machine can be moved for cleaning underneath.
 2. In some areas an approved backflow prevention device may be required between the brewer and water supply.

1. A 3/8" NPT x 1/4" Flare elbow has been supplied for water line connection. Use tubing sized sufficiently to provide a minimum of 1.0 GPM.
2. Connect the unit to an appropriate electrical power circuit.
3. Turn on the toggle (STANDBY/ON) switch behind the unit. The heating tank will start to fill. When the water level in the tank rises to the correct volume, the heating elements will energize automatically. With GT brewers, there is no danger of element burnout caused by an empty tank.
4. The heating tank will require 20 to 30 minutes to reach operating temperature (200°F). This will be indicated when the screen reads READY TO BREW.
5. Prior to brewing, dispense 12 ounces of hot water through the hot water faucet.
6. Brew a cycle of at least 12 ounces, to purge the water lines of any air that may be trapped after filling.


BREWING INSTRUCTIONS

1. Brewer should be ON (Confirm at rear toggle switch, then press ON/OFF button). Ready to Brew on screen.
2. Open lid on an empty airpot and place on deck, ready to receive coffee.
3. Place a new filter in brewcone.


4. Pour ground coffee into brewcone.

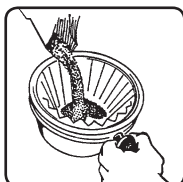

5. Position brewcone into brew rails.

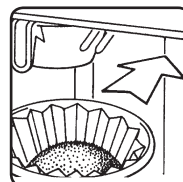

6. Press Brew button.

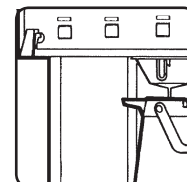

WILBUR CURTIS COMPANY
Montebello, CA 90640

FOR THE LATEST SPECIFICATIONS AND INFORMATION GO TO WWW.WILBURCURTIS.COM

Quick Start

GENERATION 3 AIRPOT BREWERS

Your Curtis ADS System is Factory Pre-Set for Optimum Performance.

After connection to water and power; the rear toggle switch must be on. You will hear a beep sound, indicating power is available to the controller.

The control displays **WILBUR CURTIS**. Press ON/OFF button and the screen will display **<Airpot Brewer> WILBUR CURTIS**. After three seconds, **WILBUR CURTIS FILLING** is displayed.

Water will fill the tank (approximately 2-3 minutes depending on water flow rate). When the proper level is reached **WILBUR CURTIS HEATING** will appear on the screen. It takes approximately 20 minutes to reach setpoint temperature of 200°F.


Control will display **WILBUR CURTIS READY TO BREW** when temperature reaches the setpoint (200°F). Unit is now ready to brew.

To Go Into Programming

Turn off (dark display) by pressing ON/OFF button ② (yellow). Press and hold BREW button ④ (green) and then press and release ON/OFF button.

Continue holding BREW button. Display will read **ENTERING PROGRAM MODE**, wait until **ENTER CODE** is displayed Enter the 4-digit access code, the digits 1-4 correspond to the buttons (see illustration below).

The default code set at the factory is 1-2-3-4. Then **PROGRAM MENUS < SELECT >** will be displayed.

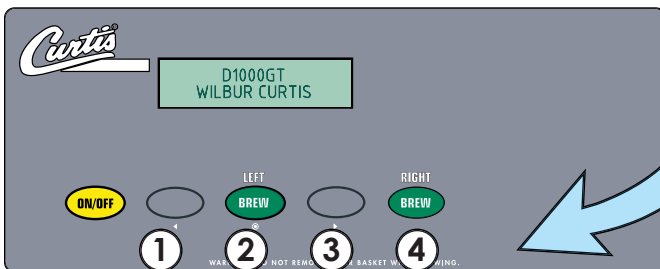

All programming selections are performed with the three center buttons.

The symbols below the buttons are:

- ◀ Scroll LEFT ①
- ⊙ SELECTION or ENTER to save new parameter ②
- ▶ Scroll RIGHT ③



Model Select - D500GT ONLY. Always perform this first. This feature re-sets all settings to the factory defaults. Scroll through menu to Model Select. Choices are: ALPHA-1, ALPHA-2, ALPHA-3/4/5, Airpot Brewer and Thermo-Alpha. **Select only Airpot Brewer.**

PROGRAM MENUS

Program Menus

Brew Volume (Factory set to 2.2 Liters)

Selecting Brew by Volume or Brew by Time depends on whether you know your brew time before starting.

From Program Menu press > display will now show the next feature.

Brew By Volume

- On D1000GT ONLY, brew buttons are independently programmable for Brew Volume (Volume or Time), Pre-infusion or Pulse Brew.
- Once volume is set and during actual brew cycle a 2 minute drip mode is added to total brew time.

Brew by Volume: Press ⊙ to Select, display will now show Select Button. Select desired Brew button. To Begin... Press the BREW button then hot water starts running, when correct volume is reached press BREW button again to stop the flow. Now the volume has been set. Pressing > button will display the subsequent menu features.

Brew By Time

Next item in the sequence is Brew by Time. Press ⊙ to Select, display will now show Select Button. The current time is now shown. By pressing < > you can toggle back and forth from minutes to seconds to exit (ex). Change the time or set and exit by pressing ⊙.

Temperature

Temperature (Factory set to 200°F)

Press ⊙ to Select. Press < > to move to desired temperature and then ⊙ to set. Temperature is programmable from 170°F to 204°F in 2-degree increments.

Energy Save Mode

Energy Save Mode (Factory set to OFF)

Press ⊙ to Select, < , >, ON, OFF or ON 140°F, ⊙ to set. When in ON, unit will automatically shut off 4 hours from last brew. When feature is OFF, unit does not have the energy saving mode.


In the ON 140°F position, temperature goes down to 140°F if unit has not brewed in 4 hours. This feature will save energy by not heating the tank during periods of non-operation.

Brew Count Odom

Brew Count Odom.

Press ⊙ to display total brew cycles. Press ex or Reset


PROGRAM MENUS CONTINUED

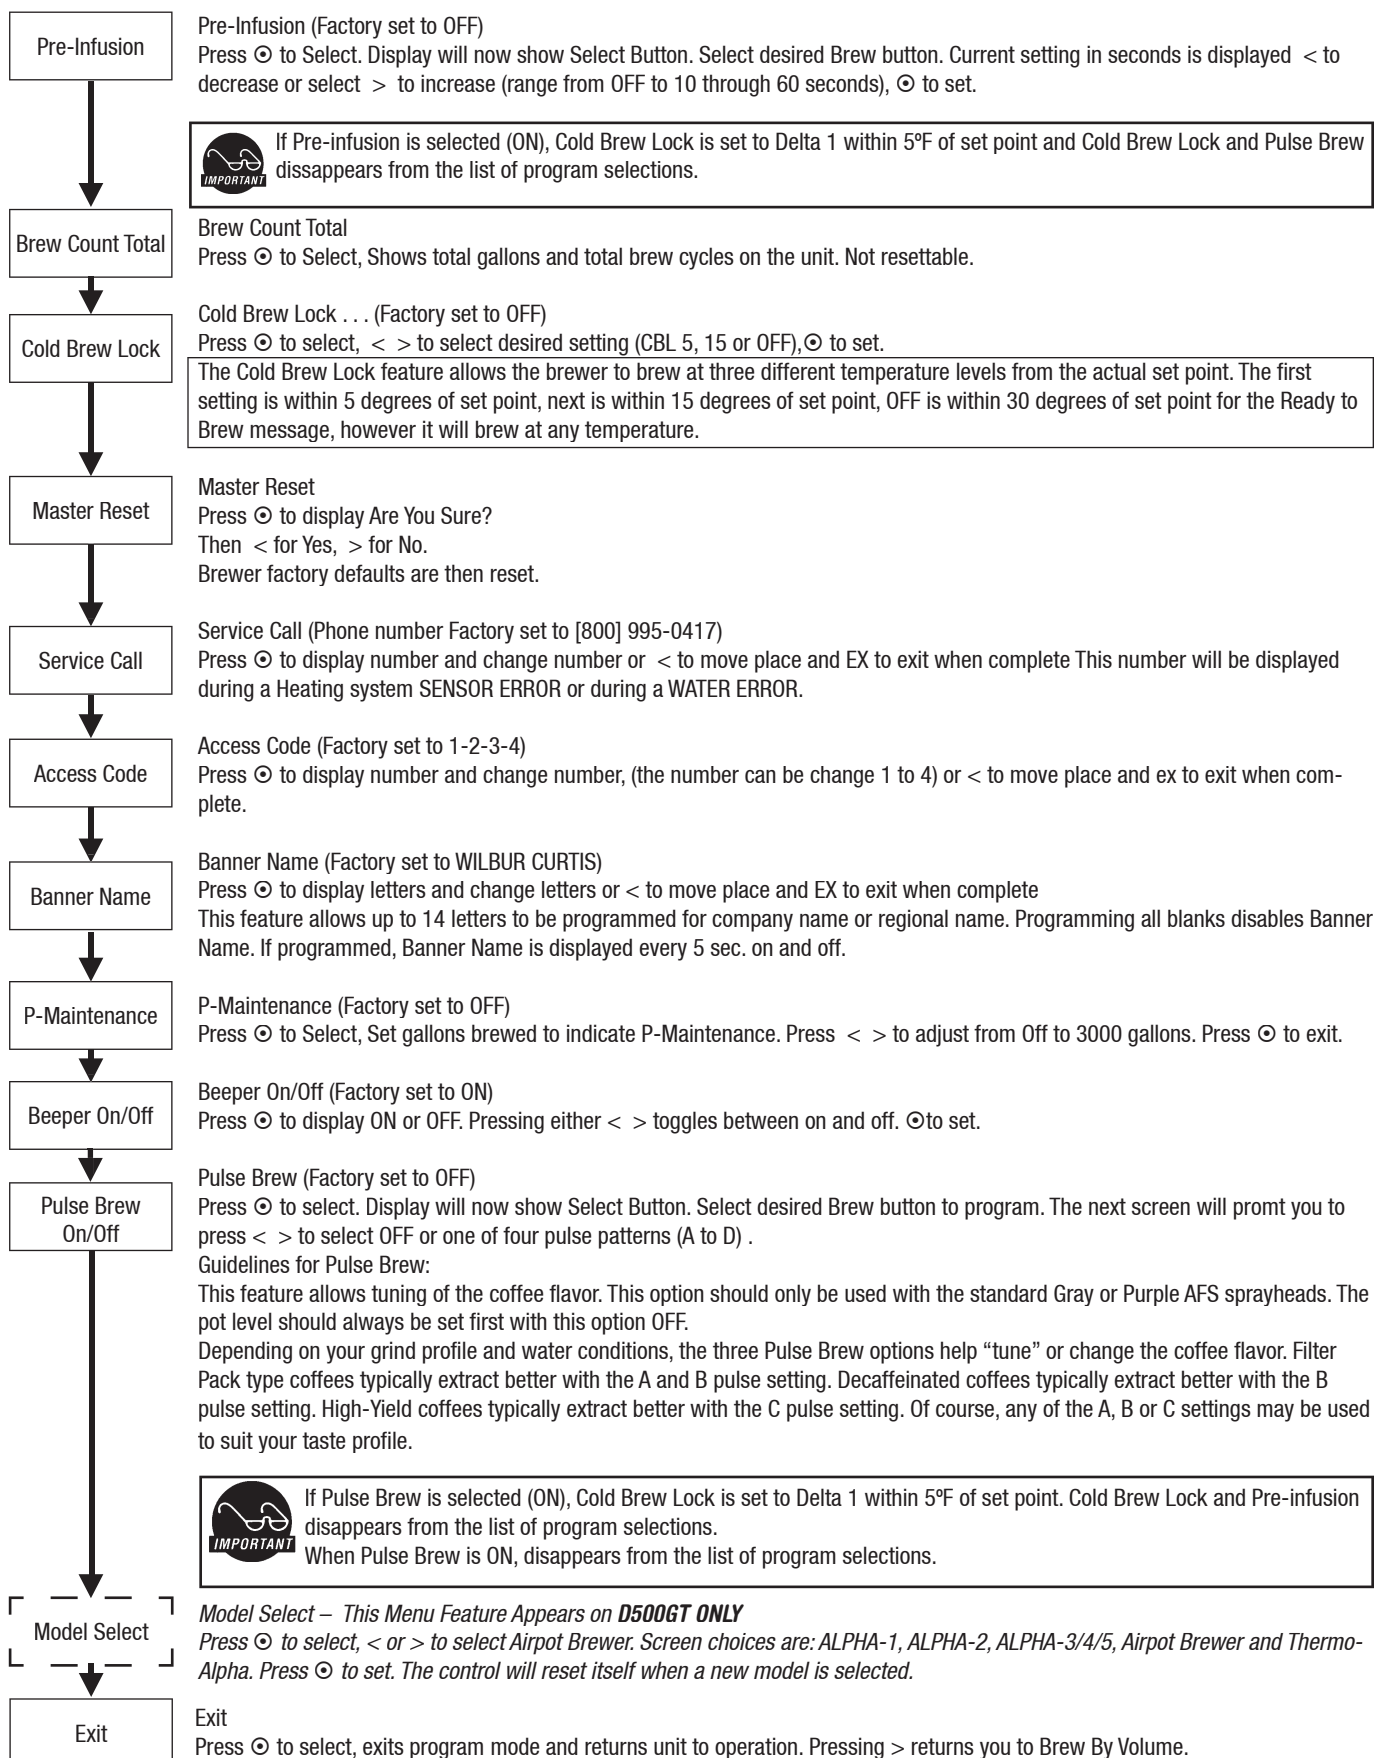

Tank Temperature Check

Turn on brewer at the control panel ON/OFF button. Press and hold ③ button (see illustration, page 2) for 5 seconds. Water Temperature will be displayed (temperature in heating tank).





PARTS DIAGRAMS D1000GT

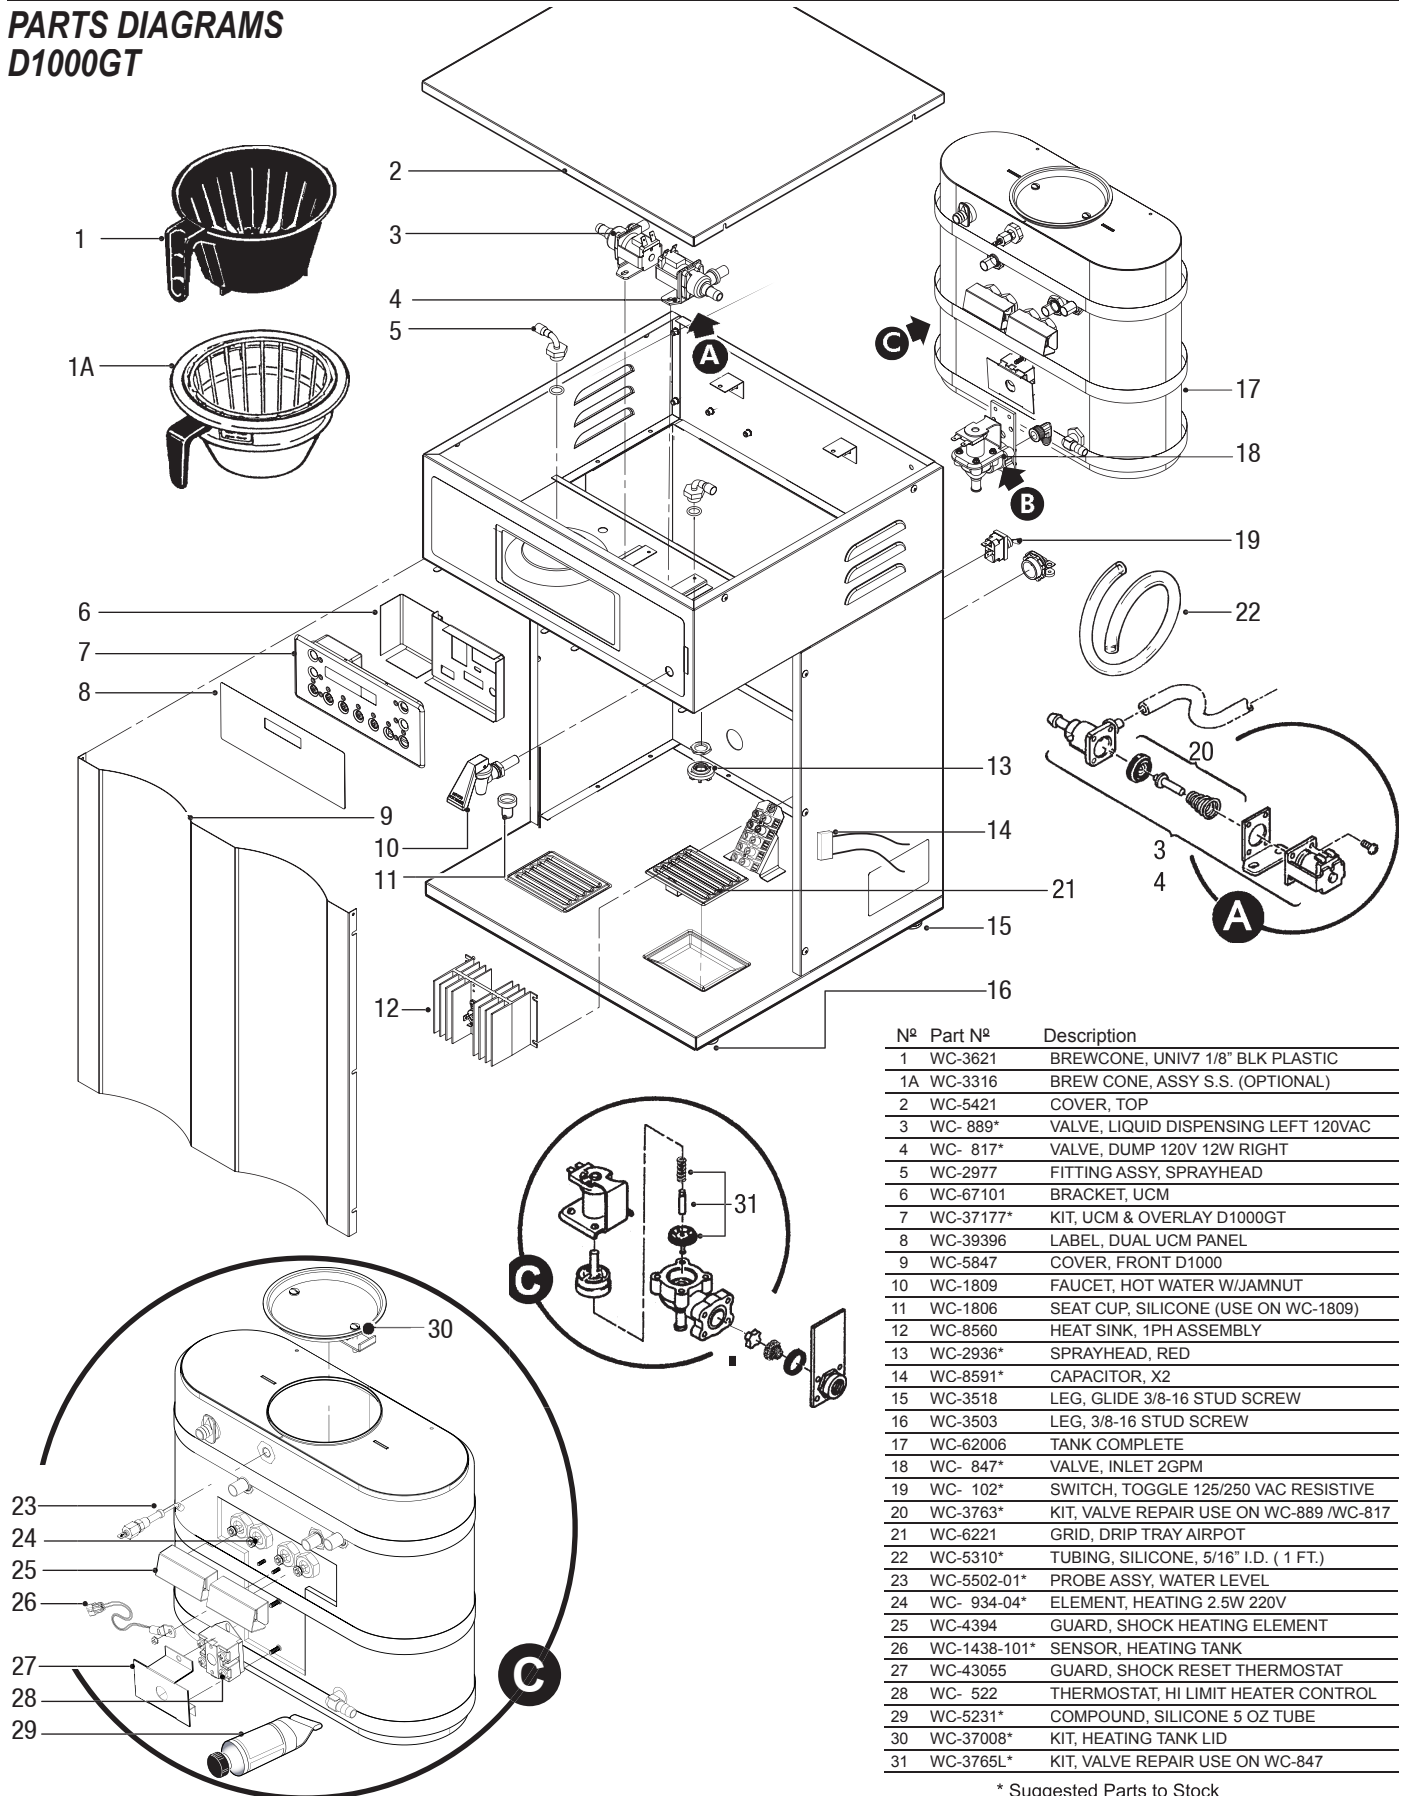

Nº	Part Nº	Description
1	WC-3621	BREWCONE, UNIV7 1/8" BLK PLASTIC
1A	WC-3316	BREW CONE, ASSY S.S. (OPTIONAL)
2	WC-5421	COVER, TOP
3	WC- 889*	VALVE, LIQUID DISPENSING LEFT 120VAC
4	WC- 817*	VALVE, DUMP 120V 12W RIGHT
5	WC-2977	FITTING ASSY, SPRAYHEAD
6	WC-67101	BRACKET, UCM
7	WC-37177*	KIT, UCM & OVERLAY D1000GT
8	WC-39396	LABEL, DUAL UCM PANEL
9	WC-5847	COVER, FRONT D1000
10	WC-1809	FAUCET, HOT WATER W/JAMNUT
11	WC-1806	SEAT CUP, SILICONE (USE ON WC-1809)
12	WC-8560	HEAT SINK, 1PH ASSEMBLY
13	WC-2936*	SPRAYHEAD, RED
14	WC-8591*	CAPACITOR, X2
15	WC-3518	LEG, GLIDE 3/8-16 STUD SCREW
16	WC-3503	LEG, 3/8-16 STUD SCREW
17	WC-62006	TANK COMPLETE
18	WC- 847*	VALVE, INLET 2GPM
19	WC- 102*	SWITCH, TOGGLE 125/250 VAC RESISTIVE
20	WC-3763*	KIT, VALVE REPAIR USE ON WC-889 /WC-817
21	WC-6221	GRID, DRIP TRAY AIRPOT
22	WC-5310*	TUBING, SILICONE, 5/16" I.D. (1 FT.)
23	WC-5502-01*	PROBE ASSY, WATER LEVEL
24	WC- 934-04*	ELEMENT, HEATING 2.5W 220V
25	WC-4394	GUARD, SHOCK HEATING ELEMENT
26	WC-1438-101*	SENSOR, HEATING TANK
27	WC-43055	GUARD, SHOCK RESET THERMOSTAT
28	WC- 522	THERMOSTAT, HI LIMIT HEATER CONTROL
29	WC-5231*	COMPOUND, SILICONE 5 OZ TUBE
30	WC-37008*	KIT, HEATING TANK LID
31	WC-3765L*	KIT, VALVE REPAIR USE ON WC-847

* Suggested Parts to Stock

PARTS DIAGRAMS **D500GT**

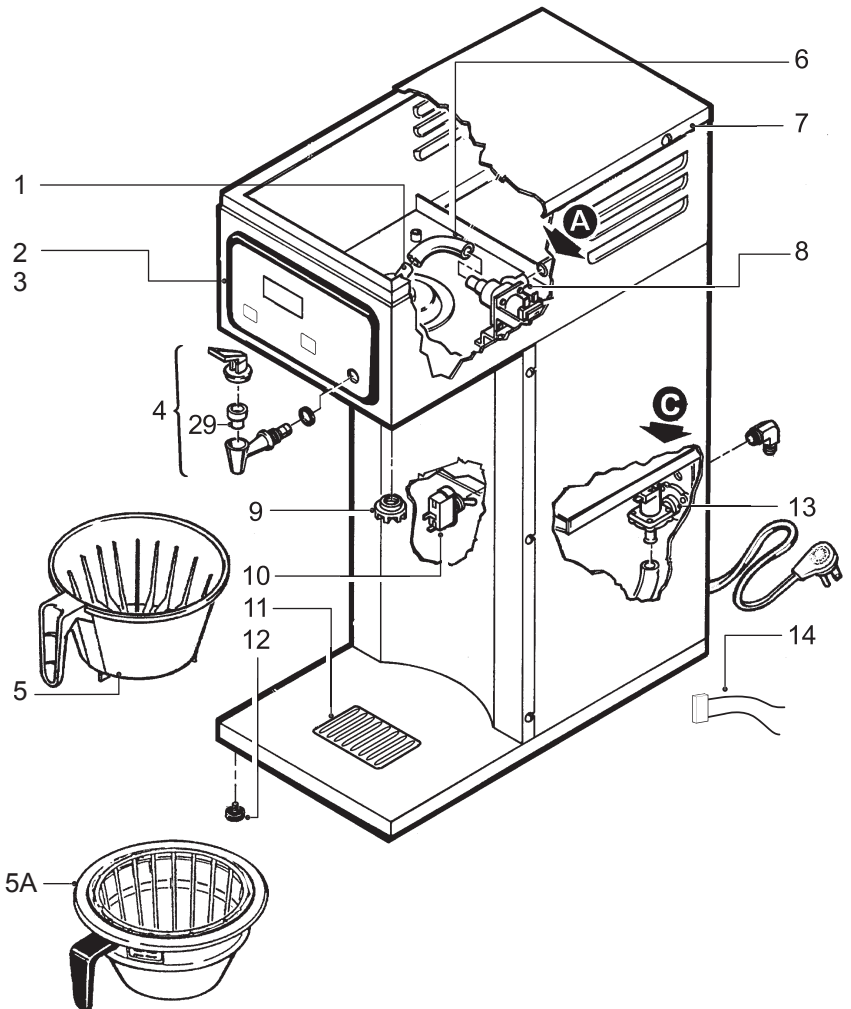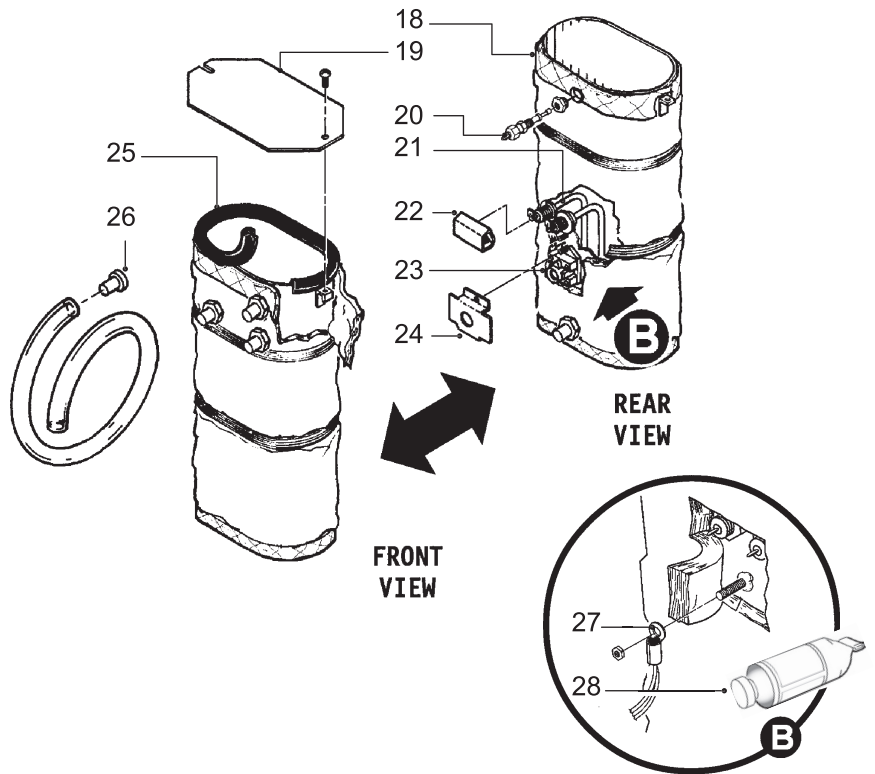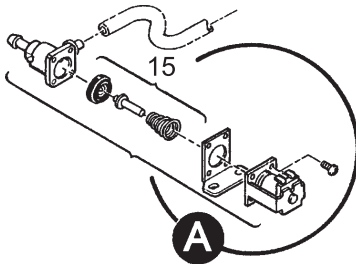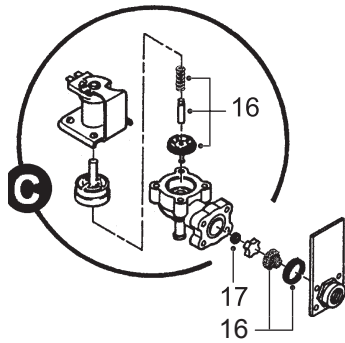

Item N°	Part N°	Description
1	WC-2977	FITTING ASSY, SPRAYHEAD
2	WC-37064*	KIT, LABEL & UCM D500GT CURTIS
3	WC-39346	LABEL, CNTRL PNL (CURTIS LOGO)
4	WC-1809	FAUCET, HOT WATER W/JAM NUT
5	WC-3621	BREWCONE, UNIV7 1/8" BLK PLASTIC
5A	WC-3316	BREW CONE, ASSY S.S. (OPTIONAL)
6	WC-5310	TUBING, SILICONE, 5/16" I.D. (1 FT.)
7	WC-5450	COVER, TOP
7A	WC-58117**	COVER, TOP D500GT
8	WC- 889*	VALVE, DUMP LEFT 120V
9	WC-2936*	SPRAYHEAD, RED (.131 DIA.)
10	WC- 102*	SWITCH, TOGGLE 125/250 VAC RESISTIVE
11	WC-6221	GRID, DRIP TRAY AIRPOT
12	WC-3503	LEG, SCREW BUMPER 3/8-16 STD
12A	WC-3518	LEG, GLIDE 3/8"-16 STUD SCREW
13	WC- 826L*	VALVE, INLET 1 GPM 120V 10W
14	WC-8591	CAPACITOR, X2
15	WC-3763*	KIT, VALVE REPAIR USE ON WC-889
16	WC-3765L*	KIT, VALVE REPAIR USE ON WC-826
17	WC- 830	WASHER, FLW 1/2" 1.0 GPM USE W/WC-826
18	WC-6277	TANK COMPLETE, D500GT 120V
19	WC-5851	COVER, TANK W/NOTCHES
20	WC-5502-01*	PROBE ASSY, WATER LEVEL
21	WC- 917-04	HEATING ELMNT 1450W 120V W/NUTS
22	WC-4394	GUARD, SHOCK HEATING ELEMENT
23	WC- 522	THERMOSTAT, HI LIMIT HEATER CONTROL
23A	WC- 523	THERMOSTAT, MANUAL RESET
24	WC-43055	GUARD, SHOCK RESET THERMOSTAT
25	WC-43062	GASKET, HEATING TANK
26	WC-43058	PLUG, TANK DRAIN, PP RED
27	WC-1438-101*	SENSOR, HEATING TANK
28	WC-5231*	COMPOUND, SILICONE 5 OZ TUBE
29	WC-1806	SEAT CUP, SILICONE (USE ON WC-1809)

* SUGGESTED PARTS TO STOCK ** FOR UNITS MADE BEFORE 5/2004

CLEANING

Regular cleaning of your airpots will maintain the highest quality coffee your equipment is capable of producing. Proper cleaning is essential to maintain that fresh, appealing look to your coffee service.

1. First turn off the unit button on the front control panel.
2. Wipe all exterior surfaces with a damp cloth, removing spills and debris.
3. Slide the brewcone out and clean it. Thoroughly soap the sprayhead area with a mild detergent solution.
4. Wash the brewcone and wire brew basket, if applicable. Use a soft bristled brush for hard to clean areas. Wash both parts with a detergent solution or put these parts through a dishwasher.




CAUTION

Do not use harsh powders or cleansers containing chlorine.

Cleaning Airpots:


- Clean with warm water and dishwashing detergent. Use a sponge cleaning brush to scrub inside.
- Rinse thoroughly with hot water.
- Do not immerse airpots in water. Do not place in dishwasher.

ELECTRICAL SCHEMATIC D1000GT

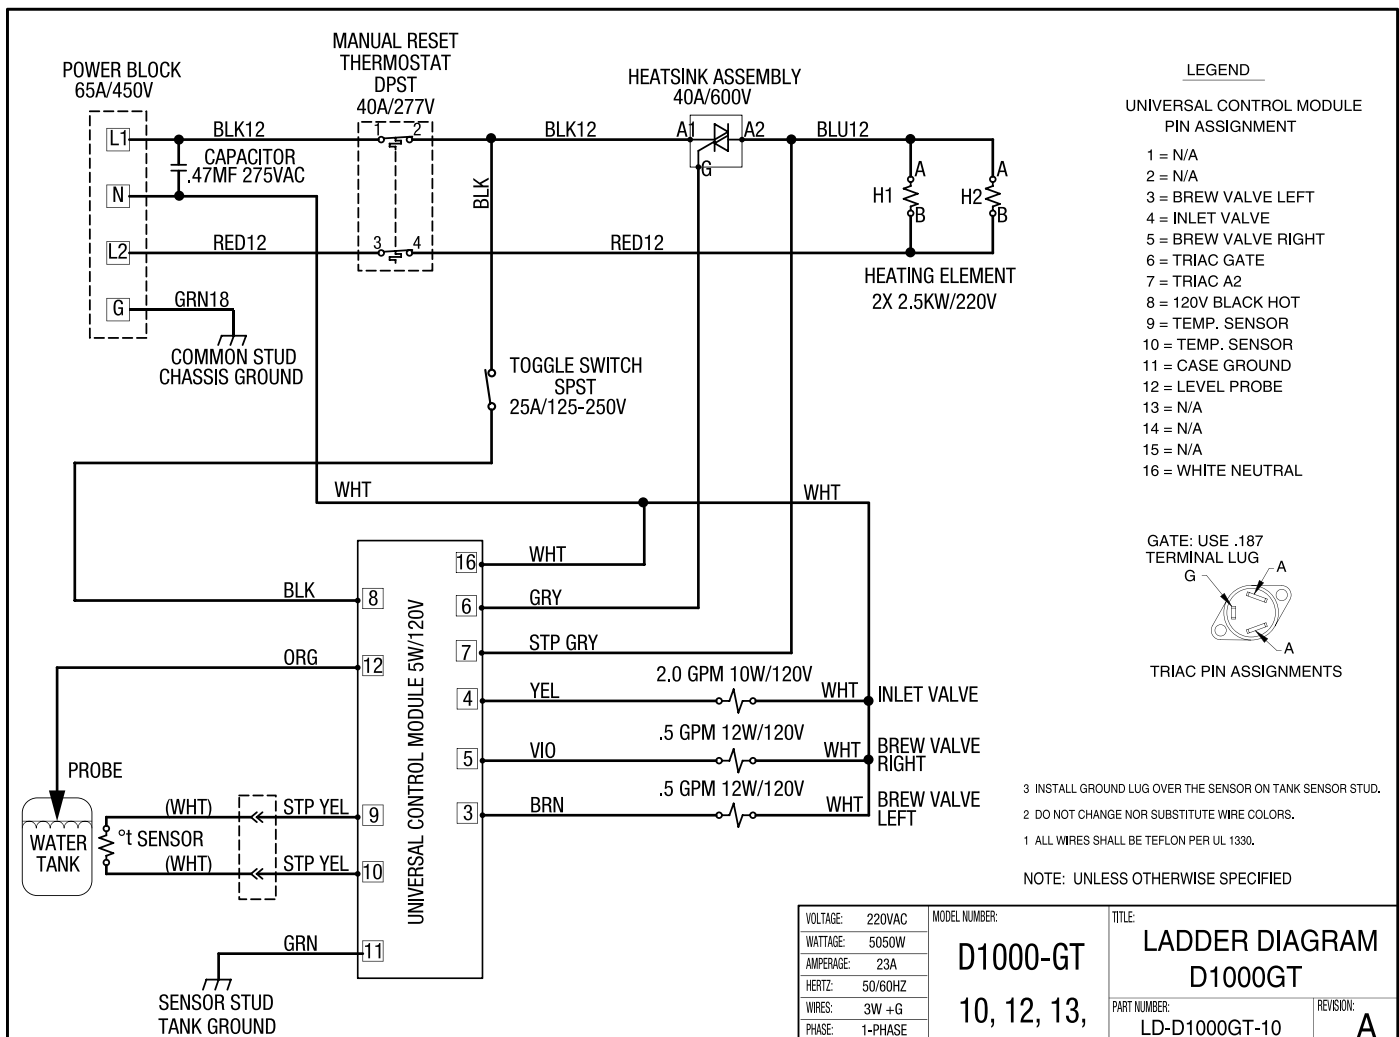

ELECTRICAL SCHEMATIC

D500GT

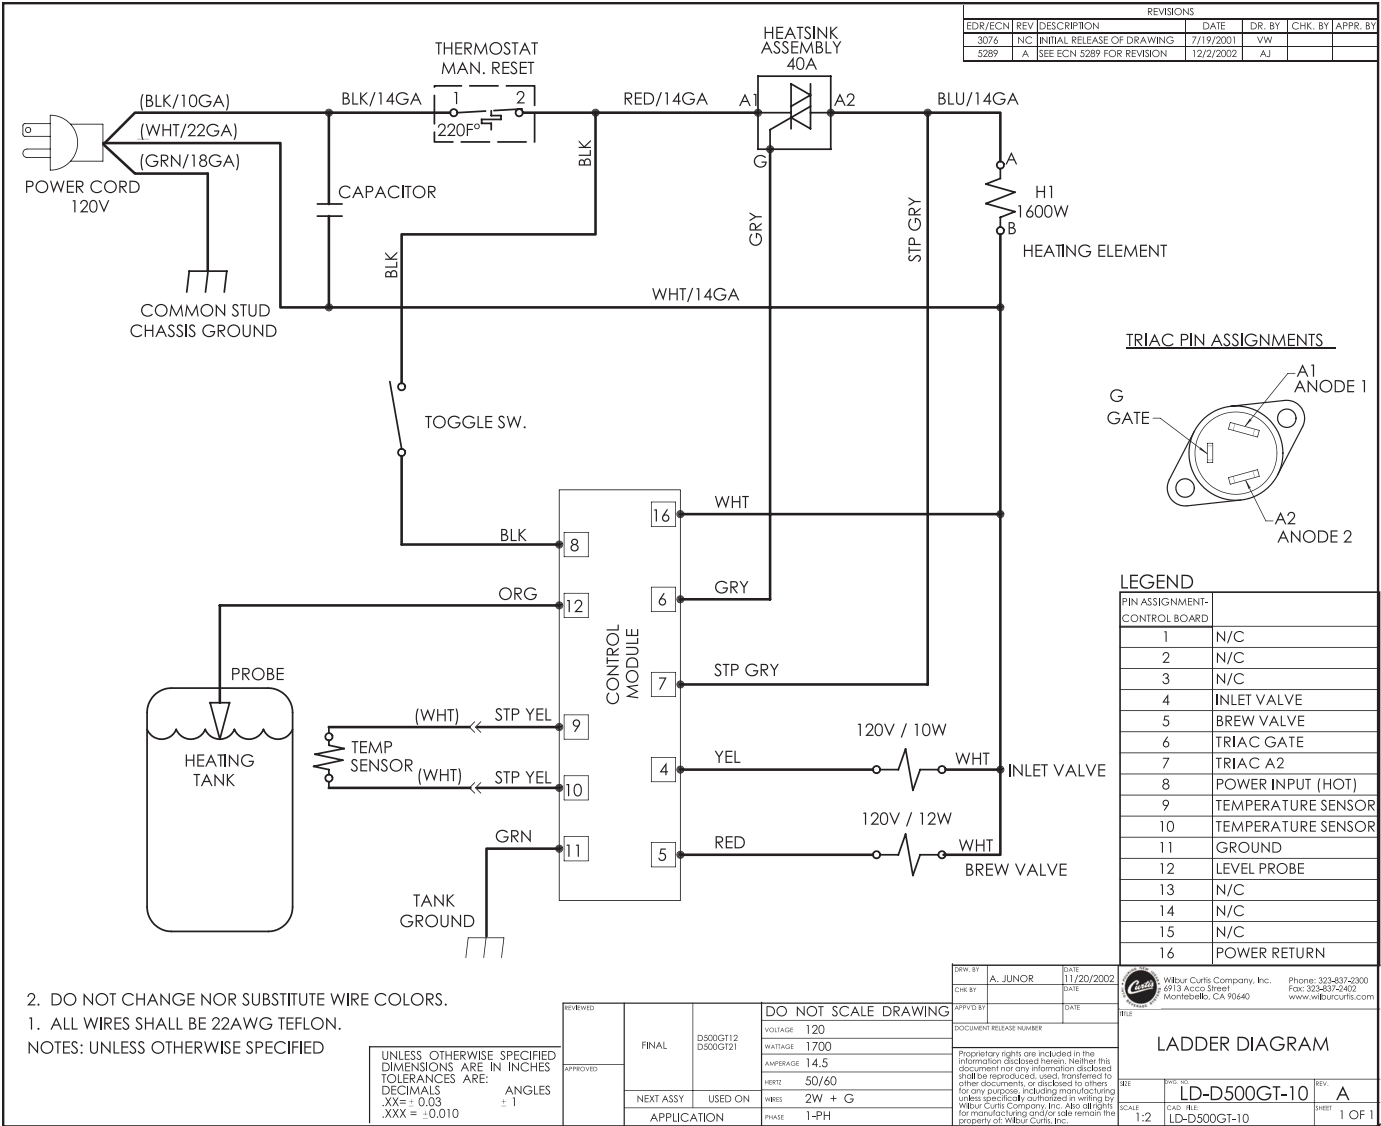

Product Warranty Information

The Wilbur Curtis Company certifies that its products are free from defects in material and workmanship under normal use. The following limited warranties and conditions apply:

3 Years, Parts and Labor, from Original Date of Purchase on digital control boards.

2 Years, Parts, from Original Date of Purchase on all other electrical components, fittings and tubing.

1 Year, Labor, from Original Date of Purchase on all electrical components, fittings and tubing.

Additionally, the Wilbur Curtis Company warrants its Grinding Burrs for Forty (40) months from date of purchase or 40,000 pounds of coffee, whichever comes first. Stainless Steel components are warranted for two (2) years from date of purchase against leaking or pitting and replacement parts are warranted for ninety (90) days from date of purchase or for the remainder of the limited warranty period of the equipment in which the component is installed.

All in-warranty service calls must have prior authorization. For Authorization, call the Technical Support Department at 1-800-995-0417. Effective date of this policy is April 1, 2003.

Additional conditions may apply. Go to www.wilburcurtis.com to view the full product warranty information.

CONDITIONS & EXCEPTIONS

The warranty covers original equipment at time of purchase only. The Wilbur Curtis Company, Inc., assumes no responsibility for substitute replacement parts installed on Curtis equipment that have not been purchased from the Wilbur Curtis Company, Inc. The Wilbur Curtis Company will not accept any responsibility if the following conditions are not met. The warranty does not cover and is void under the following circumstances:

- 1) Improper operation of equipment: The equipment must be used for its designed and intended purpose and function.
- 2) Improper installation of equipment: This equipment must be installed by a professional technician and must comply with all local electrical, mechanical and plumbing codes.
- 3) Improper voltage: Equipment must be installed at the voltage stated on the serial plate supplied with this equipment.
- 4) Improper water supply: This includes, but is not limited to, excessive or low water pressure, and inadequate or fluctuating water flow rate.
- 5) Adjustments and cleaning: The resetting of safety thermostats and circuit breakers, programming and temperature adjustments are the responsibility of the equipment owner. The owner is responsible for proper cleaning and regular maintenance of this equipment.
- 6) Damaged in transit: Equipment damaged in transit is the responsibility of the freight company and a claim should be made with the carrier.
- 7) Abuse or neglect (including failure to periodically clean or remove lime accumulations): Manufacturer is not responsible for variation in equipment operation due to excessive lime or local water conditions. The equipment must be maintained according to the manufacturer's recommendations.
- 8) Replacement of items subject to normal use and wear: This shall include, but is not limited to, light bulbs, shear disks, "O" rings, gaskets, silicone tube, canister assemblies, whipper chambers and plates, mixing bowls, agitation assemblies and whipper propellers.
- 9) Repairs and/or Replacements are subject to our decision that the workmanship or parts were faulty and the defects showed up under normal use. All labor shall be performed during regular working hours. Overtime charges are the responsibility of the owner. Charges incurred by delays, waiting time, or operating restrictions that hinder the service technician's ability to perform service is the responsibility of the owner of the equipment. This includes institutional and correctional facilities. The Wilbur Curtis Company will allow up to 100 miles, round trip, per in-warranty service call.

RETURN MERCHANDISE AUTHORIZATION: All claims under this warranty must be submitted to the Wilbur Curtis Company Technical Support Department prior to performing any repair work or return of this equipment to the factory. All returned equipment must be repackaged properly in the original carton. No units will be accepted if they are damaged in transit due to improper packaging. **NO UNITS OR PARTS WILL BE ACCEPTED WITHOUT A RETURN MERCHANDISE AUTHORIZATION (RMA).** RMA NUMBER MUST BE MARKED ON THE CARTON OR SHIPPING LABEL. All in-warranty service calls must be performed by an authorized service agent. Call the Wilbur Curtis Technical Support Department to find an agent near you.



WILBUR CURTIS CO., INC.

6913 Acco St., Montebello, CA 90640-5403 USA

Phone: 800/421-6150 ♦ Fax: 323-837-2410

♦ Technical Support Phone: 800/995-0417 (M-F 5:30A - 4:00P PST) ♦ E-Mail: techsupport@wilburcurtis.com

♦ Web Site: www.wilburcurtis.com

FOR THE LATEST SPECIFICATION INFORMATION GO TO WWW.WILBURCURTIS.COM